



PO Box 128
Healdsburg, CA 95448
www.vinbiz.com
707/837-5410
800/544-2210

Luminite Cleaning Instructions

All of the following should be performed in a clean, dry environment with the unit unplugged.

CLEANING THE FILTERS

After approximately 20 - 30 hours of use (depending on dust) your Luminite air filters will need to be cleaned.

1. Remove lid – set to one side
2. Leaving the sleeve attached, place light cage to the back of the unit
3. Remove the four (4) screws (two on each side) that secure the top of the unit in place.



4. Being careful of the wires connecting the top to the base, using the handles pull straight up on the top of the unit to remove top, place the top on its side directly behind the base.



5. Remove and inspect all three (3) filters.




6. Shake dust out of filters, the filters can be washed in warm water if necessary (if washed the filters must be fully dry before re-installing).



7. Using a damp rag, wipe off the inside of the case being careful not to disconnect any wires or to get the components wet.

8. Install cleaned filters.

9. Replace top, being careful to align the top of the blower (A) with the air inlet (B) in the top.

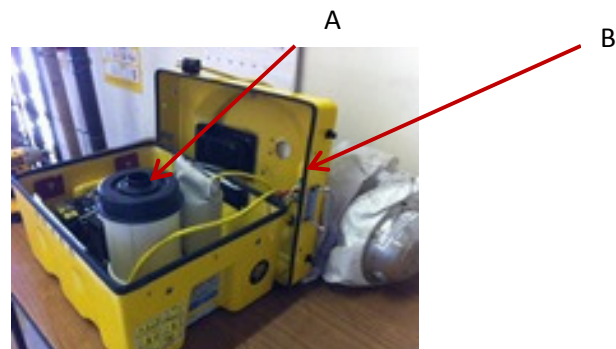

10. Install the four (4) screws to attach the top to the base.

11. Connect to a power source and test the unit.

CLEANING THE SLEEVE

1. Inflate the sleeve fully but do not turn on the bulb.
2. Using only a small amount of soap, warm water and a white towel lightly wipe the sleeve.
3. Rinse soap off with clean water and low pressure (NO power nozzles).
4. Keep the sleeve inflated until fully dry.
5. Roll-up the sleeve as normal and close the unit.

****NEVER USE A PRESSURE WASHER TO CLEAN THE SLEEVE OR THE UNIT – DAMAGE WILL OCCUR****